



- Cable Description
- S1 VCR-Matrix
 - S2 Matrix-VCR
 - S3 DVD-Matrix
 - S4 LD-Matrix
 - S5 TivoHD-Matrix
 - S6 Tivo1-Matrix
 - S7 Matrix-Tivo1
 - S8 Matrix-Rcvr
 - S9 Matrix-PC
 - S10

- 1 VCR-Matrix
- 2 Matrix-VCR
- 3 DVD-Matrix
- 4 LD-Matrix
- 5 BluRay-Matrix
- 6 Tivo1-Matrix
- 7 Matrix-Tivo1
- 8 TivoHD-Matrix
- 9 Matrix-TV
- 10 Matrix-Rcvr
- 11 Matrix-PC
- 12

- D1 BluRay-Rcvr
- D2 DVD-Rcvr
- D3 LD-Rcvr

- O1 TV-
- O2 TivoHD-
- O3 LD-

- H1 BluRay-TV
- H2 TivoHD-TV
- H3 PC-TV

- RGB1 DVD-
- RGB2 TivoHD-
- RGB3 LD-

- Monitor**
- SVid
- Vid
- Aud
- Multiroom**
- Vid
- Aud
- Pre-Out**
- Front
- Surround
- Center
- Sub
- TAPE1-Aud
- TAPE1-Aud
- TAPE2-Aud (Monitor)
- TAPE2-Aud
- Control
- Control
- Amp Out**
- A-Front
- A-Center
- A-Surround
- B-Main
- AC Power**
- Switched
- Switched
- Unswitched